



## KULLANIM KILAVUZU / USER MANUAL



TR EN

# LABOMAT 195B

Binicili Akülü Zemin Temizleme Makinesi  
Ride-On Scrubber Dryers With Batteries

Bu kılavuz makinanın çalıştırılması ve bakımı için gerekli olan talimatları bulunduruyor. Makinayı çalıştırmadan ve kullanmadan önce bu kılavuzu dikkatlice okuyun. Yedek parçaları sipariş ederken lütfen yedek parça ve aksesuar şemasına bakın.

Parçaları veya aksesuarları eşleştirmeden önce, lütfen önce makinenizin modelini ve seri numarasını belirleyin parçaları ve aksesuarları herhangi bir yetkili servis merkezinden sipariş verebilirsiniz veya bayiye telefonla veya mail ile ulaşın.

Bu makine mükemmel servis sağlayabilir.

Aşağıdakilerden daha da fazlası yapılrsa, en düşük maliyetle optimum verim elde edilebilir:

- Makineyi dikkatle çalıştırın.
- Makineye kullanım kılavuzunda verilen bakım talimatlarına uygun şekilde bakım yapın.
- Bakım için her zaman orijinal ekipmanları kullanın.



#### Çevreyi Koruyunuz.

Lütfen yerel bölgeye göre atık bertarafi ile ilgili düzenlemelere uygun olarak ve çevre güvenliğini sağlamak için ambalaj malzemesi, pil ve toksik sıvı gibi donma önleyici madde ve yağ gibi eski makine bileşenlerini çöpe atmayın. Lütfen geri dönüşümün iyi yapılmasını sağlayın.



Önlemler	3
Makine Çalışması Hakkında Talimatlar	4
Teknik Parametreler	5
Makinanın Çalıştırılması	7
Akü Kurulumu	17
Makine Bakımı	18
Sorun Giderme	19

Bu makine, endüstriyel ve ticari kullanım için uygundur ve özel olarak kullanılan diğer amaçlar yerine kapalı zemini temizlemek için kullanılabilir. Lütfen piyasada ticari değeri eşdeğer olan makinalar için kullanılan ve önerilen püskürme tabancası ve fırça kullanın.

Tüm operatörler aşağıdaki güvenlik bilgilerini okumalı, anlamlı ve gözlemlenmelidir. Aşağıdakiler, güvenlik uyarı işaretleridir.

**Uyarı:** Bu kılavuzdakiler personelin yaraalanmasına veya ölümüne neden olan riskleri uyarmak içindir.

**Güvenlik için:** Makineyi kullanırken dikkat edilmesi gereken noktaları belirtir.

Aşağıdaki uyarılara riayet edilmiyorsa: personel yaraalanabilir, elektrik çarpmayı, yanım veya patlamaya sebebiyet verebilir.

**Uyarı:** Yanım veya patlama tehlikesi:

- Yanıcı sıvı kullanmayın; makineyi yanıcı sıvı, hava veya toz bulunan yerlerde çalıştmayın.

Bu makine patlamaya dayanıklı motor ile donatılmıştır.

Eğer bu makine yanıcı hava, sıvı veya tozun bulunduğu yerde çalışırsa, elektrik motorunda başlatma ve çalışma esnasında kıvılcım üretебilir ve flaş patlayabilir veya patlama gerçekleştirebilir.

- Lütfen yanıcı maddeler veya reaktif metaller almayın.

- Pil hidrojeni serbest bırakır. Lütfen kıvılcım veya açık ateşten uzak tutun. Şarj olurken pil kabini açık tutulmalıdır.

**Uyarı:** Elektrik çarpması tehlikesi. Lütfen makineyi muhafaza etmeden önce, sıkışan pil çkartın.

**Uyarı:** Döner fırçanın çalışması. Ellerinize yakınlaşmayın. Lütfen dönen makineyi korumadan önce gücü kapatın.

Aşağıdaki bilgiler operatör veya ekipmana yönelik potansiyel tehlikelere neden olan koşulları açıklamaktadır :

### UYARI: MAKİNEYİ KULLANMADAN ÖNCÉ OKUYUNUZ

- Makine üzerindeki etiketleri dikkatle okuyunuz. Bu etiketlerin üstünü hiçbir şekilde kapatmayın ve hasar görmüşse değiştiriniz.
- Makine yalnızca yetkili ve eğitilmiş kişilerce kullanılmalıdır.
- Makinerinizin çocukların tarafından oyuncak amaçlı kullanılmasına izin vermeyiniz. Çocukların ve diğer insanların yanında makinenizi kullanırken dikkat ediniz.
- Asla farklı tipte deterjanları karıştırın. Aksi takdirde tehlikeli gazlar oluşabilir.
- Makineyi asla yan veya ters şekilde yerleştirmezsiniz.
- Makineyi asla patlayıcı ortamlarda kullanmayın.
- Makineyi mal tasıtmak için asla kullanmayın.
- Asit solüsyonu kullanmayın, aksi halde insanlara veya makineye zarar verebilirlersiniz.
- Makinenizi sabit konumda iken uzun süre çalıştırın. Zemine hasar verebilir.
- Makinerizle jilet, çivi gibi maddeler ve yanıcı, patlayıcı (benzin, alkol, yağ) vb. sıvıları vakumlamayınız.
- Makine tehlikeli tozların temizlenmesine uygun değildir.
- Yangın halinde toz içeren bir yangın söndürücü kullanın, su kullanmayın.
- Eşyalann düşme tehlikesi varsa raf veya iskelelere çarpmayın.
- Çalıştırma hızını emis koşullarına göre belirleyiniz.
- Makineyi asla düz olmayan veya çok fazla toz bulunan alanlarda çalıştırmayın.
- Makine yıkama ve kurutma işlemlerini aynı zamanda yapmak durumundadır, ıslak zeminde çalışırken emniyet tedbirleri alınarak uyan levhalan kullanın.
- Makine tekrarlı olarak sorun yaşarsa lütfen bunun yetersiz bakımından kaynaklanmadığından emin olunuz, daha sonra en yakın EDİT ENDÜSTRİYEL yetkili servisi merkezini arayınız.
- Makinenin parçalarını değiştirirken daima yetkili acente veya bayiye gidip orijinal LABOORY - LABOMAT yedek parçasını isteyiniz.
- Yalnızca orijinal LABOORY - LABOMAT fırçaları kullanın.
- Bakım yapılırken daima makinenin kapalı olmasını dikkat ediniz.
- Her bakım işleminden sonra tüm elektrik bağlantılarını eski haline getiriniz.
- Sökmek için alet gerektiren koruyucu parçaların asla sökmemeyiniz.
- Makineyi asla doğrudan basınçlı su veren fiskiye veya aşındırıcı maddeler kullanarak temizlemeyiniz.
- Deterjan solüsyonunu makineyi kullanmadan saatler önce doldurun.
- Makineyi kullanmadan önce tüm kapak ve başlıkların kılavuzda gösterildiği şekilde yerleştirilmesini sağlayın.
- Toz hazznesini sökmemek önce hazznenin boş olduğundan emin olunuz.
- Kazaları önlemek ve motorun yanmasını engellemek için makine yağmur altında kesinlikle çalıştırılmamalıdır.
- Cihaz (çocuklar dahil olmak üzere) fiziksel, duyusal veya zihinsel engelli ve deneyimsiz kişilerin kullanımı için dizayn edilmemiştir. Bu tür kişiler tarafından kullanılması gerektiğinde bu insanların güvenliğinden sorumlu kişiler tarafından gözetim altında tutulmalıdır.

**1. Lütfen makineyi çalıştırmayın:**

- Yanıcı sıvıya temas ederken veya yanıcı havaya yaklaşıırken, aksi takdirde patlamaya neden olabilir.
- Makineyi çalıştmak için eğitilmiş ve yetkili olmadıkça,
- Çalışma kılavuzunu okumuş ve anlamış olmadıkça,
- Makinanın çalıştırılması için doğru koşullar sağlanmadıkça.

**2. Makinayı çalıştırma başlamadan önce :**

- Lütfen tüm güvenlik donanımlarının yerinde ve doğru çalıştığından emin olun.

**3. Makineyi kullanırken:**

- Eğim ve kayma yüzeyi ile karşılaşığınızda yavaşça yürümeyi deneyin. Kaymayı önleyici ayakkabı giymeyi tercih edin.
- Dönerken yavaş hareket edin
- Makine bozulduğunda veya işlem başarısız olduğunda derhal haber verin.
- Çocukların makinayla veya çevresinde oynamasına izin vermeyin.
- Kimyasal teknedeki karıştırma oranını ve işleme talimatlarını izleyin.

**4. Makinadan ayrılmadan veya bakım yapmadan önce:**

- Makinanın tüm fonksiyonlarını durdurun ve makineyi sabit bir yere yerleştirin.
- Makinayı kapatın.

**5. Makineyi onarırken:**

- Parçaları hareket ettirmekten kaçının. Lütfen gevşek ceket, gömlek veya büyük beden giymeyin.
- Makineyi çalıştmadan önce lütfen önce akü kablolarını söküün.
- Akü veya akü kablolarını ararken lütfen koruyucu eldiven ve göz koruyucularını giyin.
- Akünün sıvı asidine dokunmayın.
- Bu makineye yüksek basınçlı su püskürtmeyin veya makinaya hortumla su tutmayın.
- Üreticinin sağladığı veya onayladığı yedek parçaları kullanın.
- Tüm bakımlar nitelikli bakım personeli tarafından yapılmalıdır.
- Makinenin orijinal tasarımını değiştirmeyin.

**6. Makineyi taşıırken:**

- Makineyi kapatın.
- Makineyi pil açık konumdayken nakletmeyin.
- Makineyi diğerlerinin yardımıyla taşıyın.
- Makineyi tırдан indirirken tavsiye edilen taşıma önlüğünü kullanın.
- Makineyi kamyonda veya römorkta sabitlemek için halat kullanın.
- Fırça kafasını daha düşük konuma indirin.

**Servis sorularını göndermeden önce, aşağıdaki gibi semptomların ayrıntılı bir tanımını yapın:**

- Seri Numarası
- Hasar detayları
- Kontrol edilen öğelerin içeriği
- Yapılan ayarlamalar ve etkileri
- Diğer yararları bilgiler

### Aksesuarlar

Değiştirilen parçalara ihtiyaç duyduğunuzda, sadece üreticilerin orijinal aksesuarlarını kullanın. Makinede daha ciddi hasarlardan kaçınmak ve makinenin daha iyi performans göstermesini sağlamak için lütfen yedek parçaları zamanında değiştirin.

<b>Performans</b>		
Çalışma verimliliği	m <sup>2</sup> /h	6200
Çalışma genişliği	mm	900
Silici lastik genişliği	mm	1100
Maksimum çalışma hızı	km/h	6
Maksimum eğim	%	15
Ses seviyesi	dB(A)	61

<b>Su tankı</b>		
Temiz su haznesi kapasitesi	lt	180
Akit su tankı kapasitesi	lt	195

<b>Fırça</b>		
Fırça sayısı		2
Fırça yeri		main
Fırça devir hızı	rpm	180
Fırça basıncı	Kg	40
Fırça kaldırma sistemi		elektrik
Fırça çapı	mm	430

<b>Motor</b>		
<b>Sürüş motoru</b>		
Güç	W	650
Voltaj	V	36
<b>Vakum motoru</b>		
Güç	W	550
Voltaj	V	36
<b>Fırça motoru</b>		
Güç	W	650 x 2
Voltaj	V	36 W

<b>Akü</b>		
Akü sayısı ve kapasitesi		6 x (6 V / 200 Ah )
Akü boyutu		260 x180.5 mm
Çalışma saati		4 - 5 saat

Dikkat: Çalışma süresi akü tipine ve makinenin kullanımına bağlıdır.

<b>Fren</b>		
Fren pedali	type	mekanik
El freni	type	mekanik



<b>Cihaz</b>	
Su haznesi uyarı lambası	x
Düşük su deposu uyarı ışığı	
Akü uyarı ışığı	x
Akü uyarı ışığı ve alarm ekranı	x
Acil durdurma düğmesi	
Hız düğmesi	x
Fırça basınç göstergesi basıncı	x
İleri / geri düğmesi	x
Vakum motoru düğmesi	x
Fırça düğmesi	x
Hoparlör	x

<b>Standart aksesuarlar</b>	
Emici şerit	x
Fırça	

<b>Seçenekler</b>	
Yuvarlak fırça	x
Yuvarlanan fırça	x

#### Kontrol sistemi

- (1) Fren pedali / el freni kolu, elleri (2) Gaz adımı kurulu (3) Su tankı musluk kolu düğmesi  
 (4) Vakum motoru ve ısı kontrol düğmesi (5) Acil durdurma düğmesi (6) Hoparlörler (7) Hız düğmesi  
 (8) Güç alarmı ve ekran alarmı (9) Kirli su deposu tam uyarı lambaları (10) Temiz su deposu boş kontrol lambası  
 (11) Fırça kontrol düğmesi (12) Start düğmesi (13) İleri ve geri kumanda kolu (14) Depo kapağı (15) Geri alarmı

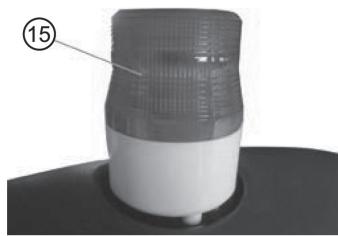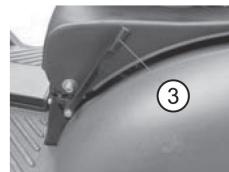

## Kontrol Sistemleri Tedbirleri

(1) Fren pedalı ve el freni kumanda kolu

Pedal 1, makinenin pedal hareketinin kontrolüdür veya fren yapar kol 2 kilit pedalı 1 ve makine parkı ve frenini kontrol edin.  
(Fren bölümünü bakın.)

(2) Gaz pedalı Ön / arka hızını kontrol et

(3) Tank hava çıkış musluğu anahtarı Açıktır veya kapalı fırça akışını ayarlayın Kapalı konum 0 Açıktır konum 1-4

(4) Vakum motoru ve emme düğmesi Vakum motorunu kontrol edin ve emme kafasını indirin. Konum. "Stop" vakum motoru kapalı, su emme başlığını kaldır. Konum. "Fan" vakum motoru açık, su emme kafası aşağı.

(5) Acil durdurma düğmesi Aynı zamanda tüm kontrol sistemini keser. Acil bir durum oluştuğunda anahtara basın.

Çalışmayı yeniden başlatın, düğmeyi saat yönünün tersine 1/4 çevirin.

(6) Hoparlörler Kontrol korna çalışması

(7) Hız düğmesi Hareket ederken veya çalışırken hızı ayarlamak için kullanılır. "Düşük" düğmesine aktarıldığında, makinenin iyice temizlenebilmesi için düşük hızı ayarlandığını belirtir. Makineyi yüksek hızda tanımlamak için "Yüksek" ayarına getirin, daha hızlı temizleyin.

(8) Güç ve ekran alarmı Makinenin çalışma süresini ve akü durumunu görüntüler, akü zayıf olduğunda alarm sinyali gönderir.

(9) Kirli su deposu tam ıkaz ışığı Kirli su deposu dolu olduğunda alarm sinyali gönderir.

(10) Temiz su deposu boş uyarı ışığı

(11) Fırça kontrol düğmesi Fırça motorunun dönüşünü kontrol edin ve fırça aşağıya doğru sürüün.

Konum P "dur": motor kapalı, fırça yükseltme Konum "acele": motor açık, fırçalıyor

(12) Anahtar başlangıç düğmesi Tüm elektrik kontrol sistemi bileşenlerini etkinleştirin. Konum. "0", elektrik sistemi kapalı

Konum. "1" elektrik sistemi açık



(13) İleri geri seçim kolu Yıkama makinesini ileri geri sağlayın. "İleri" Pozisyonu: yıkama makinesi ileri gider.

"Geri" Pozisyonu: yıkama makinesi geri döner.

(14) Su deposu kapağı Temiz çözelti deposunu doldurmak için

(15) İleri ve geri uyarı ışığı (kirmizi) Bu ışık yanlış geri dönüşün aktif olduğunu gösterir ve makineyi durdurur.

İşlem 13'te açıkladığı gibi devam edin.

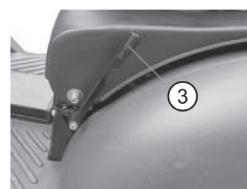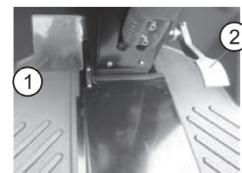

## Ortak Güvenlik Kılavuzu

Bu kılavuzda, makine EC standartlarına uygun olarak ve 98/37 / EEC numaralı (makine standartları) açıklanmıştır. Makineden sorumlu kişi, makinelerin sağılıklı ve güvenli çalışmasını sağlamak için EEC direktiflerine ve çalışma ortamının yerel düzenlemesine uymalıdır. Genellikle ön incelemeden önce makineyi başlatın.

### UYARI!

Makine sadece yetkili operatörler tarafından kullanılabilir. Yetkisiz kullanımı önleyin. Makinenin güvenlik performansını azaltabilecek herhangi bir değişiklik, adaptasyon ve uygulama yasaktır. Anahtar ve motorlar kapalı durumdayken makineyi kontrol ederseniz tehlike oluşturur. Makinenin stabilitesini azaltabilecek herhangi bir çalışma davranışını engellenir. Açık havada çalışırken lütfen eldiven ve güneş koruyucu gözlük kullanın.

### TEHLİKELİ!

Ele alınacak kurallara ek olarak, makineden sorumlu kişi, aşağıdakileri makine operatörlerine açık bir şekilde vermelidir: Sabit veya hareketli hortumlar doğru konuma yerleştirilmelidir. Raf çıkarılırsa veya güvenlik sistemi bağlı değilse veya kısa devre olursa, herhangi bir sebepten bağımsız olarak, makine işleminden hemen önce onarılmalıdır. Makine sadece uygun kullanım amacıyla göre uygun koşullar altında kullanılabilir. Kullanım ve bakım talimatlarının amacına uygun olarak ve profesyonel inceleme talebine uyun. Makinenin yanıcı veya zehirli sıvıları ve tozu vakumlamak için kullanılması yasaktır. Makinenin hareketli parçalarına dokunmak tehlikelidir, bu tür davranışlara kesinlikle izin verilmez. Bu parçalara dokunmanız gerekiyorsa, lütfen makineyi kapatın ve önce panodan anahtarı kaldırın. Makine bir davlumbaz ile donatılmamış, lütfen zehirli bir duman alanında ve tehlikeli alanda çalıştırmayın. Operatörler dışındaki kişilerin taşınmasını yasaklayın.

### Makine Ambalajı

Makine paketi düz araçlar ile teslim edilir. Teknik parametrelerde makine ağırlığı ve büyülüğu sağlanmıştır. Forkliftler, makinenin ortasındaki kamyonun yarısına sahip olacak şekilde yerleştirilmelidir. Ambalaj, çarpışmayı önlemek için çok dikkatli olmalıdır. Makineyi çok yükseğe kaldırırmak gerekiyor. Çok gösterişli ambalajlama olmadan.

### Boşaltma Ambalajı

Makineyi açmak dikkatli ve yumuşak olmalıdır. Makinelerin altına metal veya ahşap rampa kullanmalıdır.

### Boşaltma Sonrası Ambalajlama

Ambalaj açıldıktan sonra, makineyi kontrol edin, takılı değilse pili takın, kullanımından sonra kısa mesafe taşıması varsa, akü kablösünü çıkarın, firça ve emme kesici kafasını çıkarın. Uzun ömürlü nakliyeden önce, makine orijinal ambalajına geri yüklenmelidir. Makine kısa bir mesafe içinde uygulanabilir.

### Kaldırma Makinesi

Makineyi kaldırırmak için doğru makineyi kullanın, ancak kaldırma yeteneğinden emin olun.



## **Yıkayıcı-Kurutucu Kullanımı**

### Gerekli Önemler

- 1- Makine sadece yetkili ve güvenilir personel tarafından kullanılmalıdır.
- 2- Makine kullanımda değilken, başlangıç anahtarının fişini ve el frenini çekin
- 3- Makine kullanımda değilken, fırçanın bozulmasını önlemek için fırçayı kaldırın.
- 4- Eğim üzerine park etmeyin.

### **UYARI!**

Makineyi kullanmadan önce, önce pil sıvı hacmini kontrol edin.

### **Yıkayıcı-Kurutucuya Başlatın**

Makineyi başlatmak için adımlar;

- 1- Kirli su kazanını takın
- 2- Temiz su deposunu doldurun
- 3- Fırçayı yerden yukarı doğru kontrol edin. ("dur" için düğme 11 Şekil .3) \*
- 4- Frenin serbest bırakıldığını kontrol et
- 5- Toplam 5 anahtarı kontrol paneline saat yönünde takın (bu tamamen sistem güç kaynağının kontrolünü sağlar).
- 6- Emme motorunu açmak için 4 düğmesine basınız. (Şek. 3)
- 7- Fırça motorunu açmak için 11 tuşuna basınız (Şekil.3).
- 8- Kolu 3'e basma koluya açık çözelti deposunu açın (Şekil 3).
- 9- Manevra kolunu 14'ü A konumuna getirin (Şekil .3).
- 10- İlerlemeye başlayın ve iyi bir hız elde edin, güç pedalına 2 yavaş basın (Şekil 3).

### **Ortak Güvenlik Kılavuzu**

Bu kılavuzda, makine EC standartlarına uygun olarak ve 98/37 / EEC numaralı bir numarada (makine standartları) açıklanmıştır.

Makineden sorumlu kişi, makinelerin sağlıklı ve güvenli çalışmasını sağlamak için EEC direktiflerine ve çalışma ortamının yerel düzenlemesine uymalıdır. Genellikle ön incelemeden önce makineyi başlatın.

### **UYARI!**

Makine sadece yetkili operatörler tarafından kullanılabilir. Yetkisiz kullanımı önleyin. Makinenin güvenlik performansını azaltabilecek herhangi bir değişiklik, adaptasyon ve uygulama yasaktır. Anahtar ve motorlar kapalı durumdayken makineyi kontrol ederseniz tehlike oluşturur. Makinenin stabilitesini azaltabilecek herhangi bir çalışma davranışını yasaktır. Lütfen dışında çalışırken eldiven ve güneş koruyucu gözlük kullanın.

### **TEHLİKELİ!**

Ele alınacak kurallara ek olarak, makineden sorumlu kişi, aşağıdakileri makine operatörlerine açık bir şekilde vermelidir: Sabit veya hareketli hortumlar doğru konuma yerleştirilmelidir. Raf çıkarılırsa veya güvenlik sistemi bağlı değilse veya kısa devre olursa, herhangi bir sebepten bağımsız olarak, makine işleminden hemen önce onarılmalıdır. Makine sadece uygun kullanım amacıyla göre uygun koşullar altında kullanılabilir. Kullanım ve bakım talimatlarının amacıyla uygun olarak ve profesyonel inceleme talebine uyun. Makinenin yanıcı veya zehirli sıvıları ve tozu vakumlamak için kullanılması yasaktır. Makinenin hareketli parçalarına dokunmak tehliklidir, bu tür davranışlara kesinlikle izin verilmez. Bu parçalara dokunmanız gerekiyorsa, lütfen makineyi kapatın ve önce panordan anahtarları kaldırın. Makine bir davlumbaz ile donatılmamış, lütfen zehirli bir duman alanında ve tehlikeli alanda çalışılmayın. Operatörler dışındaki kişilerin taşınmasını yasaklayın.

## Operasyon sırasında kurallar

Diğer kişilerin makineye yakın olmasına izin vermeyin. Makineler sadece yetkili kişi tarafından yetkilendirilmiş deneyimli bir operatör tarafından kullanılabilir. Operatör uygun fiziksel ve zihinsel durumda olmalı, alkol, uyuşturucu ve uyuşturucu etkisi altında olmamalıdır.

Aşağıdakilerden emin olun:

Makinede alakasız şeyler yoktur. (Örneğin, araçlar, paçavra, ekipman, vb ..) Makineyi açtıktan sonra garip bir ses olmamalı. Tuhaftır bir ses varsa, makineyi derhal durdurmanız ve gürültünün nedenini kontrol etmeniz gereklidir. Tüm güvenlik görevlileri uygun şekilde kapatılmış. İşlemenin güvenliği konusunda herhangi bir şüphe duymayın veya düşünmeyin. Hiçbir şekilde çalıştırılmayın, makinenin dengesini azaltın. Makinenin kenarı veya yüzeyine düşmesi kolay olan kaldırımlardan uzak tutup yerden güvenli bir mesafede korumalıyız. Eğimli arazilerde sürmeyein ve çok hızlı dönmemeyin, özellikle yerel kart düz değil, makineyi karanlık bir ortamda kullanmayın. Raf yakınında özel dikkat gereklidir.

## UYARI!

Su kullanıldığından su emme sistemini kullanmayın. Bu gerçekleşirse; Makinenin uygunsuz kullanımı ve makine garantisinin kaybolması söz konusudur.

## Temizlik süreci

Yıkama makinesini kullanma işlemi çok basittir.

Temizlik etkisini artırmak, yıkama ve kurutma işlemlerini ne zaman kullanacağınızı karar vermek için en uygun temizleme fırçası ve temizleme deterjanını seçmenize yardımcı olabilir. Zemin çok kirliyse, iki aşamalı bir işlem kullanacağız. İlk aşama, fırçayı onlarca metre kare içinde kullanmak ve emme kafası kaldırırmaktır. Bu, kira daha iyi temizlemek için yerde deterjan bırakacaktır. İkinci aşama, silecek kafasını vakumlayarak yerdeki kirli suyu çekin.

## UYARI!

Bu tür bir operasyon, yetkisiz memurun yerine girmemesi gereken yerde uygulanmalıdır; temizlik noktasının yakınında uygun bir işaret koymalıdır.

Temizleme işlemini tamamlamak için, aşağıdaki prosedürü uygulayın: fırça motorunu başlatmak için fırça işaretiley (11) etiketlenmiş olan düğmeye (Şekil. 3) basın. Temiz suyu boşaltmak için temiz su deposu şalteri işaretini (Şek. 3) açın.

Su akışının hızını ayarlamak için, temiz su kontrol kolunu 3 orta konuma getirin, böylece fırçanın arkasındaki tüm yüzey hemen ıslanacak ve silecekten dışarı sızan fazla su olmayacağından emin olun.

Sileceği indirip vakum motorunu çalıştmak için düğmeye basın. Gaz pedalına 2 basıldığından (Şekil 3), makine istenen hızda ileri doğru hareket edecek ve temizlik işi başlayacaktır.

Daha yüksek temizleme performansı elde etmek için makineyi yüksek hızda çalıştmak ve daha iyi temizlik sonuçları elde edilir, düşük hızda çalışmak için sağa döndürüp makinenin hızını "yüksek düşük hız" düğmesini sola çevirerek seçebilirsiniz. Aralarından seçim yapabileceğiniz iki hız var. Döner düğme 1 (Şekil 2), "Düşük" aktarıldığında, makinenin iyice temizlenebilmesi için düşük hızı ayarlandığını belirtir.

Makineyi yüksek hızda tanımlamak için "Yüksek" ayarına getirin, daha hızlı temizleyin.

Makineyi geriye doğru hareket ettirdiğinizde, vakumlama ve temizleme işlemleri tamamlandığında manevra kolu 14'ü (Şekil 3) geriye doğru çekin, aşağıdaki işlemi gerçekleştirin:

— Akırı kapatmak için temiz su deposu şalteri kolunu son seviyeye kadar bastırın.

— Fırça motorunu durdurmak ve fırçayı kaldırırmak için anahtarlar işaretini (Şekil 3) yukarı doğru kaldırın.

— 4 işaretini (Şekil 3) vakum motoruna kaldırın ve sileceği kaldırın. 8 düğmesine (Şekil 3) "STOP" konumuna, su emme kafasını yerden otomatik olarak bastırın.

## Su doldurma ve direnaj

Her temizlik işleminden önce kapağı 12 açın (Şekil 3), temiz su deposuna doğru miktarda su ve deterjan doldurun. Temiz su deposu, çoğu deterjanı anti-asit ve anti-solvent içeren polietilen malzemeden yapılmıştır. Yıkamadan sonra, kontrol kolunu 3, hortum 2 ile döndürün, kirli su kirli su tankından boşaltılacaktır. Pis su deposunu haftada en az bir kez iyice temizleyin, kapağı 1 açın, ardından emiş filtresini 4 kaldırın. Yukarıda belirtilen işlemleri yaparken koruyucu eldiven giyilmelidir.

## Doğru deterjanı seçmek

Deterjan seçin.

İyi temizlik sonuçları elde etmek için uygun deterjanı kullandığınızdan emin olun. Gerekirse tedarikçiden profesyonel öneri isteyin ve sert deterjan kullanmanın makinenin çalışma ömrünü kısaltabileceğini unutmayın.

Su motoruna zarar verebilecek düşük köpüklü deterjan veya köpük önleyici madde kullandığınızdan emin olun. Bu ürünler alamıyorsanız, geri dönüşüm kutuları ekledemen önce bu alternatif yöntemi, 50cc sıradan şarap şirkesi kullanabilirsiniz. Su deposunu temiz kullanın.

Pis su tankını aşağıdaki programa göre sekiz saatte bir temizleyiniz:

- Tutacağı 5'e çevirin, kapağı açın
- Sünger veya yüksek basınçlı su tabancası kullanarak kanalizasyon suyu deposunu temizleyin
- Yukarıdakilerin tamamlanmasından sonra kapak 6 hemen kapatılır.

## TEHLİKELİ!

Korozif ürünleri hasarlı su depoları ve sağlığınız için kullanmayın. Eldiven ve koruyucu gözlük kullanmak gereklidir.

## UYARI!

Fırçayı değiştirmeden önce, motorun yanlışlıkla başlatılmayacağından emin olmak için paneldeki çalışma anahtarını çekin.



## Makine Bakımı

### UYARI!

Fırçayı değiştirmeden önce, motorun yanlışlıkla başlatılmayacağından emin olmak için paneldeki çalışma anahtarını çekin.

## Fırça Değiştirme

Aşağıdaki prosedüre göre: kama pimini A çıkarın, B'nin Fırçalar korumasını açın; okta gösterildiği gibi yayı 2 açın

Daha sonra 2-3-4-5 fırçalayarak merkezin ortasından çıkrın. Vidayı 3 dışarı doğru döndürün, fırçayı 5 braketten 4 çıkarın.

Yeni bir fırça takın, lütfen aşağıdaki prosedürü izleyin: vidalarla 3, montaj braketyle 4 yeni fırça 5; Fırça kombinasyonu 2-3-4-5 değiştirin, sadece uygun yere monte edilebilir.



## Makine kullanıma hazır

Emme kafasının ayarlanması


Paketleme ihtiyaçlarını karşılamak için, emme kafası ayrı ayrı paketlenmiştir, sürücü plakasına monte edilmelidir, adım aşağıdaki gibidir:

1. Paleti kaldırın
2. 1 numaralı vidaları 2 numaraya yerleştirin ve fotoğrafta görüldüğü gibi hafif eğimli tutun.
3. Emme tırmık kafasını sol tarafa kaldırın, böylece 3, 4'e kadar sokulabilir.
4. Yükleme R bölge - pim 4, pim 3'te serbest bırakılacaktır.
5. Emiş borusunu emme kafasının ağızına yerleştirin.

İyi zemin Kurutma etkisi istiyorsanız, su emme kafası iyi ayarlanmalıdır.

İyi su tırmık kafa operasyonu, zemin ile temas kuracak açı ayarlamak çok önemlidir. Şeritlerin arkasında bulunan bir lastik fırça biraz eğilmelidir. Gösterilen: Bu çözüm gövde önünde toplanacak. Bu işleme ulaşmak için aşağıdaki sıraya bakın:

Perspektif açısını azaltmak için somunu 6 ve 7 saat yönünde sıkın, artırın veya saat yönünün tersine çevirin. Doğru açı oluşturulduğunda, somunu tekrar sıkın 6

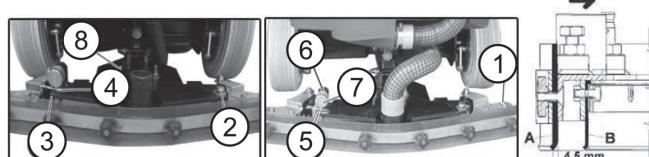

Yeraltı suyu yüksekliğinin üzerindeki emme kafası, uygun yükseklikte kontrplak ve lastik bant büyülüğüne göre ayarlanmalıdır. Bu işlem 8 metre somunu aşağıdaki gibi ayarlayarak tamamlanır.

Emme ve zemin arasındaki yüksekliği artırmak ve zemindeki basıncı azaltmak için somunu saat 8 yönünde ayarlayın. Somunu saat yönünün tersine, emme ile zemin arasındaki alçaltmaya ayarlayın ve zemindeki basıncı artırın. Bu somunlar ayrıca zeminin dengesini ayarlamak için kullanılır.


Uzun bir lastik bant yapmak ve daha iyi kurutma sonuçları elde etmek için basınç mümkün olduğunda azdır.

Kurutma etkisi genellikle hoş karşılanmazsa, bunun vakum sisteminden kaynaklandığını unutmayın.

Bu durumda: Tüpleri, girişleri, filtreleri ve su emme kafasını iyice temizleyin Elektrikli süpürge motorlarının durumunu kontrol edin Tüm su deposunun girişinin kapalı olduğunu kontrol edin.

## Emme Kafasının Lastik Bıçağı

Mükemmel su emme etkisinin elde edilmesi için, lastik bıçağın normal çalışmasını ve yer kaybının bozulmasını önlemek için değiştirme çalışmasını sürdürmesi gereklidir.

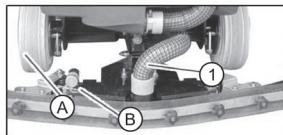


### Bıçağın Değişmesi

#### Dikkat

Bıçak yüzeyi, zemin yüzeyi ile aşındığında, kauçuk emme kafası tırmık bıçağı değiştirilmelidir.

Düz bıçak mükemmel su emme etkisinin temel unsurlarını korumak için mükemmel bir makinedir.

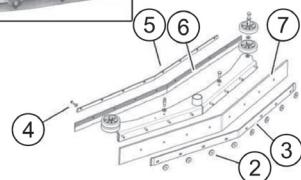

Bıçak değiştirme işlemi aşağıdaki gibidir: tepsiyi makine kafasından ve emme borusundan dışarı çıkarmak için 1. Emme kafasını aşağı indirin, vidayı söküün, R bölüm pimini A çekin ve B'ye takın. Kayışın arkasındaki 8 düğmeyi gevşetin. Kemerin 3 ve 4 vidaları 5. Yeni bıçağı kullanmak için lastik bıçağı yeniden takın. Lastik bıçağın iki yüzü vardır ve dört bıçak kenarı kullanılabilir. Tüm kanatlar hasar görmüşse, yeniestyle değiştirilmelidir. Yukarıdaki prosedürlerin aksine, yeni bir bıçak takılabilir. Kurulum işlemi emme kafasına uygun olmalıdır.

## Transmisyon


Yıkıcı-kurutucu elektrik sistemi tarafından çalışır, elektrik sistemi ön tekerlek ve iki elektronik kontrollü tekerleğinden oluşur. Kumanda kolu 14 (Şekil 3), makineyi ileri veya geri hareket ettirir. Pedal 2 (Şekil 3), makinenin hareket hızını değiştirebilir. Göstergə paneli, üç dişininin 14 anahtarına sahiptir, 14 anahtarını (Şekil 3) seçip, hızı ayarlayabilirsiniz. Seyahat veya iş (lütfen -10 puanlık kontrol girişine bakın)

## UYARI!

Sürücü tipi S / 2-RS / 2 ve "ZAPI" modellerinde, üçüncü vites devri elektrik sistemi sadece iş için dönmemek için kullanılabilir. Sürücü versiyonunda T ve "ELEK D ROSISTEM" üçüncü vites hızı çevirmek ve çalışmak için kullanılabilir.

## Sürüş işletim sistemi

Tekerlek 2 tarafından üretilen ana itici güç, tekerlek 3'e ve sürüs tekerleği 3'e doğru sürürlür. Sürüş sırasında, sürücü direksiyon simidi büyüğünde hissedilen direnci kontrol eder, direnç somunun 4 ayarı ile ayarlanabilir.

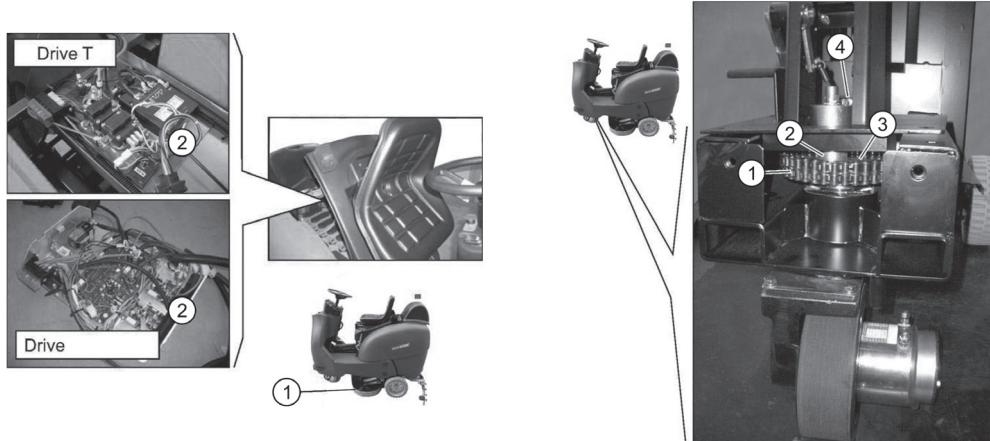

## Fren Sistemi

Fren sistemi, arabaların hareket halinde durmasını ve hareketsiz kalmasını sağlar, aynı zamanda aracı eğimli düzlemede sabit tutar.

1- Fren sistemi ayak freni üzerinde adım ile çalışır 1 (bkz. Şekil 1) freni arka tekerlekleri sağlar.

2- Frenleme, mekanik cihazların manipülasyonu ile sağlanır (bkz. Şekil 11).

3- Park freni sistemi kilitlenebilir, şu adımları izleyin:  
(A) Ayak fren pedalına 1 (bkz. Şekil 3) sonuna kadar bas.


(B) Kumanda kolu 2'yi (bkz. Şekil 3) park kabinlerine doğru itin.

Fren sistemi kilidini açmak için; basma kolunu (2), ayakları ayak frenine (bkz. Şekil 3) uygun disliye yerleştirin. Bundan sonra sürüs kontrolünü ayak freni alabilir.

4- aracın kontrol edilmesi durumunda, ayak freni çalışmazsa, düzeltmek için regülatör 3 üzerinden ayarlayabilirsiniz.


### UYARI!

En az üç ayda bir kez frenleri kontrol ettirmeli ve ayarlamalıdır.

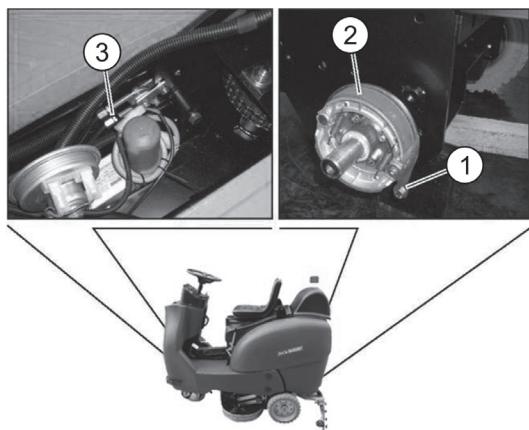

## Emiş Motoru

Rulonun yere değişmesi ile elde edilen emici motorlu kirli tahliye sıvısı. Düğme 4 (Şekil 3), su motorunun kontrol anahtarıdır. Motor ve filtre her gün kontrol edilmeli ve filtreyi zamanında temizlenmelidir. Motor ve su filtersini kontrol edin, şu adımları izleyin: Ön paneldeki dokunmatik anahtarları çıkarın ve motor kapağını 3 aqın, gücü kesin, 4 kelebek somunundan çıkarın, motoru sökün ve kontrol edin (bkz. Şekil 13'te gösterilen ok). Kurulum, yukarıdaki adımların tersini takip eder.

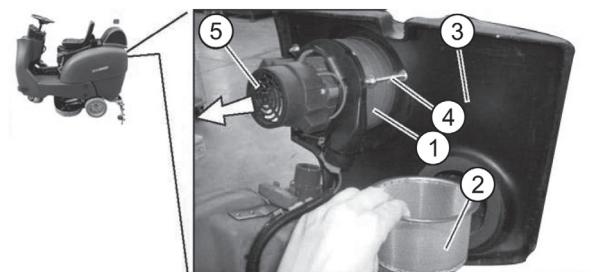

## UYARI!

Su motoru astarı her altı ayda bir kontrol edilmelidir, hasar durumunda lütfen yenisini değiştirin. Aşağıdaki adımları takiben astar değişimini: Plastik kabi 5 çıkarın, somunu serbest bırakın, astar tabanını çıkarın, astarı dikkatlice kontrol edin. Kurulum adımları tersine takip edin

## Akü

### Akü performansını kontrol edin.

Elektrolikitin yoğunluğu akü performansı ile yakından ilişkilidir, bu nedenle elektrolikitin yoğunluğunun ölçülmesi çok önemlidir. Akü elektrolitinin normal şarj yoğunluğu durumunda yaklaşık 1.260 (300B e) olması gereklidir. Yoğunluk 1.26 (300B e) ile 1.2 ila (240B e) arasındaysa ve elektrik depolama havuzu sadece kısmen şarlıysa, yoğunluk 1,14'ten (180B e) daha az ise, elektrik depolama havuzunun dolduğu anlamına gelir.

### Elektrolit yoğunluğu ölçme

Elektrolikitin yoğunluğu batarya performansıyla yakından ilişkilidir, bu heneden ölçüm çok dikkatli olmalıdır. Yoğunluk ölçer ile elektrolikit yoğunlığını ölçün. Lütfen ölçekteki yer yoğunluğu ölçüsünün doğru olduğuna dikkat edin. Damıtılmış su, elektrolit eklenmesi gibi bir tespitte, her ikisi de tamamen karıştırıldıktan sonra verileri okunmalıdır.

### Damıtılmış su doldurma

Sarj işleminden sonra, damıtılmış suyu, elektrot levhasının 6mm üstünden, akünün ilk kullanımından daha yüksek olana kadar, her bir şarjdan sonra su eklenmelidir. Bir süre kullanın, sayının gerçek durumuna göre su görünümü azaltılabilir, ancak haftada 1 kereden az olmamalıdır.

### Şarj sınırı

Akü, bir süre kullanıldıktan sonra eğer yoğunluk 1.24 (280B e) değerinden daha düşük değilse, aküyü doldurmaya ihtiyacınız olmaz. Akü uzun süre aşırı şarj oluyorsa, akü ömrünü önemli ölçüde azaltacaktır. Sarj işleminin sıvı sıcaklığı 450C veya daha az olduğunda sıvı uygundur. Elektrolit ortam sıcaklığından 10-120C daha yüksekse şarj edilirken elektrolitin sıcaklığı ne kadar olursa olsun, aşırı yüklenme durumu meydana gelebilir. Metre, elektriğin sadece% 5-10'unu gösterdiğinde, makine yalnızca tozu emebilir ve zemini süpüremez.

### Akü şarj alanları

Sarj işlemindeki batarya belirli bir yakıt gazi üretecektir, bu durumda şarj alanlarının makinenin şarj edilmesi için yeterli havalandırmanın sağlanması ve herhangi bir elektrik ve ateşin olmaması gereklidir. Şarj yeri sadece yeterli havalandırmayı korumak için değil aynı zamanda oda sıcaklığını 40-45C nin aşağısında tutulduğundan emin olmak için de önemlidir. Mevcut yetersiz havalandırma koşullarında yüklenen kullanıcı, havalandırma kanallarını (orijinal baca ile emisyon ağı paylaşamaz) kurabilir veya sorunu çözmek için bir fan kullanılabilir.

## Sürekli kullanım veya uzun süreli röлanti

Akü sürekli kullanılmazsa, elektroliz sıvı numarası normal aralıktı olsa bile, kullanıcılar her ay hücrelerin tekrar canlı kalması için aküyü boşaltmalıdır. Akünün uzun bir süre röлantiye ihtiyacı varsa, kuru ve serin bir yerde saklanması gereklidir.

Kullanıcılar aküyü en az ayda bir kez tamamen şarj etmelidir. Tam şarj işleminden, akünün her bir hücrende kabarcıklanma, voltaj ve elektrolit yoğunluğu okuma sayısının 3-4 saat arasında sabit bir kayıt olması gereklidir.

Her halükarda, uzun bir röлanti süresi olan akü, kullanımından ve elektroliz kalitesi testinden önce şarj edilmelidir.

## Aküyü takın

Akü bileşenlerini kurma adımları aşağıdaki gibidir:

Direksiyonu sökün, somunu sökün 1 (bkz. Resim 13)

Bloğu uzaklaştırın, somunu 2 gevşetin (bkz. Şekil 13).

Akü kayışını çıkarın, somunu 3 gevşetin (bkz. Şekil 13)

Aküyü takmadan önce, sağlam olması için gerekli tüm bileşenleri kontrol ettiğinizden emin olun. Akü temiz bir görünümde sahip olması gereklidir. Bağlantılı erişim portu vazelin veya gres ile kaplanabilir. Akü elektriği kurulumdan önce kayıp ise, tam kurulumdan sonra bekleyin.


## Akü şarj cihazı bağlantısı

Akü değiştirmek için gereken adımlar şöyledir:

Direksiyon simidini çıkarın 1

Koltuk 2'yi kaldırın

Kayışı 3 çıkarın

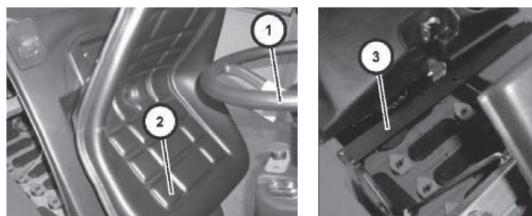

## Bakım işlemlerinin güvenlik kontrol rutin kontrolü

(1) Süpürgeci aşağıdaki adımlara uygun olarak profesyonel ve teknik personelin güvenlik, hasar veya arızasını kontrol etmelidir: Motoru kapatmadan önce kontrol edin. Bu parçaları değiştirdikten sonra veya belirli bir zaman aralığında, "rutin bakım ve operasyonel kontrol" talimat sayfasına bakın.

(2) Normal çalışma durumundaki cihazları her 6 ayda bir, uzman kuruluşun yetkilendirdiği müfettiş kontrol etmelidir. Normal çalışma koşullarında güvenliği sağlamak için makine öğretimi her 5 yılda bir personele öğretilemelidir.

(3) Makineden sorumlu kişi, makinenin gerektirdiği şartlara uygun olarak yılda bir kez mutlaka kontrol etmeli, yetkili kişi, süpürme makinelerinin hala teknik güvenlik yönetmeliklerine uygun olup olmadığına karar vermelidir. Ardından kontrol panelini işaretlemelidir.

Düzenli bakım prosedürlerini gerçekleştirin	Her aralık					
	8	40	125	200	500	1500
1) Temiz su deposu	x					
2) Temiz elektrikli süpürge motor filtresi	x					
3) Filtre deposu kontrol etme	x					
4) Su deposu filtrelerini temizleme		x				
5) Vakum borusunu ve emme kafasını kontrol etme	x					
6) Firça durumunu kontrol etme		x				
7) Emme kafasının kenarını kontrol etme		x				
8) Dişli zincir yağlama					x	
9) Motor fırçalarını 6 ayda bir kontrol etme					x	
10) Güvenlik cihazlarını kontrol edin (mikro anahtar, korna, acil durum durdurma butonu, vb.)		x				

Problem	Neden	Çözüm
<b>Emme kafası Yetersiz kurutma</b>	Eski kauçuk yapıştırıcı Tüp tıkanıklığından arınmamış Fırça ayarı uygun değil Emme kafası bloğu Yanan elektrikli süpürge motoru Eski motor karbon fırçası Fırça pozisyonu yeterince alçak değil	Lastiği değiştir Temiz borular Fırçayı ayarla Temiz emiş kafası bloğu Motoru kontrol edin ve değiştiririn Karbon fırçalarının değiştirilmesi Alt fırçayı kontrol edin
<b>Temizleme maddesi fırça ortasına akmiyor</b>	Fırça su kaynağı engelleme Temizleme maddesi valfi kapalı veya yeterince açık değil Su boruları enstrüksiyonla Su haznesinde su yok	Yıkama boru hatları Temizleme maddesi valfini açın Boruların restorasyonu veya değiştirilmesi
<b>Makine yıkama Sonucu edici değil</b>	Eski fırça Zemin basıncındaki fırçanın yol açtığı kontrol paneli hataları	Fırçayı değiştirin Fırça basıncını arttırın
<b>Makine başlatılamıyor</b>	5 ve 3 arasındaki anahtar değişemez Akü ünitesi yanık Mikro anahtarı yanlış ayarlanmış Ani bir acil stop butonu ile basıldı	Saat yönünde döndürme anahtarını kırmızı ışık yandığında kontrol edin gerekirse değiştirin. Uyarı! Sigorta kontrol ünitesinde Asla yüksek seviye sigorta kullanmayın ve sigortanın arızasında hata varsa, lütfen servis merkezine başvurun. Micro Switch Release acil durdurma Sistemini değiştirin ve makineyi tekrar başlatın. (Bkz. Çamaşır makinesi başlangıç programı)
<b>Makine başlamıyor ve Aniden duruyor</b>	Akü terminali gevşeme Operatörün dokunma mikro anahtarı güç sistemi mikro şalterini keserek güç koltuğunun altında ya da bağlı değil Operatör başladı ve mikro sigorta yuvası kırıldı	Bataryayı bağlayın Serbest bırakma düğmesine basın ve işlemi tekrar başlatın Mikro anahtarı değiştirin veya bağlayın Oturun, makineyi kapatın ve yeniden başlatın

Başarısızlık kararı Problem	Nedeni	İyileştirme metodu
Makine ileri doğru hareket etmediğinden sonra	Sürücü pedal hatası Kontrol bileşenleri hatası	Bağlantıyı kontrol edin Kontrol bölümünü kontrol edin
Elektrikli süpürge kapatıldı ve başlatılıyor	Tank şamandıra düğmesi vakum motoru güç kaynağını keser. (Sürücü S ve Jumbo serisi, bu gösterge paneli üzerinden 72 alarm kodu görüntülenir.)	Elektrik süpürge motorlarını kapatın, su haznesini boşaltın.
Makineyi hareket ettirme zorluğu	Fren basıldı	Freni serbest bırak.
Makinenin su sızıntısı var	Sıvı vanası açık Boru veya contalarda hasar	Vanayı kapatın. Boru veya contaları değiştirin.
Sistem firçadaki artışı azaltamaz	Sigorta arızası Marş geçerli kabul edilemez Marş motoru hasarı Devre kartı sorunu	Değiştirme Kontrol Değiştirme Devre kartını değiştirin

## LABOMAT 195B

A.E.E.E. yönetmeliğine uygundur.

AKÜ / BATTERY	36 V / 200 Ah	VAKUM MOTOR / VACUUM MOTOR	550 W
FİRÇA DEVİRİ / BRUSH ROTATING	180 rpm	FİRÇA MOTORU / BRUSH MOTOR	650 W x 2



### İTHALATÇI FİRMA / IMPORTER :

EDİT ENDÜSTRİYEL MAK. SAN. TİC. A.Ş.  
Çamlıca Mah. Anadolu Blv. Ç Blok 20 U 4 Yenimahalle  
Ankara Türkiye Tel: +90 312 394 75 00

This Guide provides necessary instructions on machine operation and maintenance.

Before operation or use of this machine, please carefully read and understand this Guide.

When ordering the replacement parts, please refer to the spare and accessory parts manual attached to the machine.

Before matching parts or accessories, please firstly determine your machine model and serial number. You can order parts and accessories from any authorized service center or dealer by telephone or mail. This machine can provide excellent service. If the following can be further done, the optimum efficiency can be obtained with the lowest cost:

- Carefully operate the machine.
- Maintain the machine according to the maintenance instructions provided in the operation manual.
- Use the OE or same-grade parts for maintenance.



### **Protect the environment**

Please dispose the old machine components such as packaging material, battery, etc. and toxic liquid such as anti-freezing agent and oil according to your local regulations on waste disposal and on the premise of maintaining the environmental safety. Please ensure to carry out the recycling well.

## **INDEX**

Precautions	22
Instructions on machine operation	23
Technical parameters	24
Machine operation	26
Battery installation	35
Machine maintenance	37
Troubleshooting	38

This machine is suitable for industrial and commercial use and specially used for cleaning indoor hard floor instead of other purposes. Please use the suggested scouring pad and brush as well as the commercially available floor cleaner suitable for this machine. All operators must read, understand and observe the following safety precautions.

The following are explanation for safety warning signs and [for safety] headlines used in this Guide:

**Warning:** for warning of risks possibly causing personnel injury or death or unsafe operations.

**For safety:** point out matters which must be observed when using the machine to guarantee safety.

If the following warnings are not observed, it may cause: personnel injury, electric shock, fire or explosion.

**Warning:** fire or explosion hazard:

- Do not use flammable liquid; do not operate the machine close to or in the place where there is flammable liquid, air or dust.
- This machine is not equipped with explosion-proof motor. If this machine is used in the place where there is flammable air, liquid or dust, electric motor may generate spark during the start and operation, which may cause flash fire or explosion.
- Please do not pick up flammable materials or reactive metals.
- The battery releases hydrogen. Please be away from spark or open fire. The battery cabin must be kept open when charging.

**Warning:** Electric shock hazard. Please firstly disconnect the battery wring before maintaining the machine.

**Warning:** Operation of rotary brush. Do not get close with hands. Please turn off the power before maintaining the machine.

The following information explains the conditions causing potential dangers to the operators or equipment:

**WARNING: Please read this guide before using the machine.**

- Please read the labels on the machine very well. Cover the labels in no way and please change it if it has been damaged.
- This machine can be used only by people who are qualified.
- Please keep away this machine from your children and be careful while using this machine at the places which are close to people and children.
- Never blends varied types detergents. Otherwise, it can generate some hazardous gases.
- Place this machine backwards or on its side in no way.
- Never use this machine at places that have risk to explode.
- Never use this machine for transporting anything.
- Do not use acid solution, otherwise you can damage to people or the machine.
- Please do not operate the machine so long time while it is static. It can damage the place.
- Please do not vacuum something such as razor blade,nail and explosive materials (gasoline,alcohol etc.. )
- This machine is not suitable for cleaning dangerous dust.
- Please use an extinguisher including dust instead of water in the event of fire.
- Please do not crash shelves if the things have risk to fall.
- Please determine operating speed according to vacuum conditions.
- Please avoid to operate this machine at the uneven and dusty places.
- This machine has to arrange washing and drying processes at the same time. So you should use caution signs as considering safety rules while the machine is operating at wet ground.
- Please ensure that poor maintenance doesn't causes to that problem if you it would be lived some problem while the machine is operating. And after that, please call to the closest EDIT ENDÜSTRİYEL service center.
- Please ask original spare parts for LABOORY-LABOOMAT from authorized agent or dealer if you need to change them.
- Please use only original LABOORY-LABOOMAT brushes.
- Please ensure that machine is not operating during maintenance process.
- Please arrange the wirings to the previous state after every maintenance processes.
- Never take down protective parts which are needed equipment to be taken down.
- Never clean this machine as using pressure water, fountain or corrosive matter directly.
- Please do not fill up detergent solution hours before using the machine.
- Please provide to be placed all covers at the way it is shown on guide.
- Please ensure that dust bag is empty before you take dust bag.
- Please do not operate this machine under rain to avoid accidents and motor to burn.
- This machine is not designed for ( including children ) physically handicapped, deaf, mentally handicapped and not-authorized people. That's kind of people should be guarded by responsible person for their safety if they need to use this machine.

**1. Please do not operate the machine:**

- When contacting flammable liquid or getting close to flammable air, otherwise it may cause explosion or flash fire.
- Unless being trained and authorized to operate the machine.
- Unless having read and understood the operation manual.
- Unless in the conditions of correct operation.

**2. Before starting the machine:**

- Please ensure that all safety equipment have been in place and operated correctly.

**3. When using the machine:**

- Please walk slowly when encountering the slope and sliding surface.
- Please wear anti-skid shoes.
- Please slow down when turning.
- Report immediately when the machine is broken or the operation fails.
- Do not let the children play on or around the machine.
- Observe the mixing ratio and processing instructions on the chemical vessel.

**4. Before leaving or maintaining the machine:**

- Stop and place the machine on the stable ground.
- Shut down the machine.

**5. When repairing the machine:**

- Avoid moving the parts. Please do not wear loose jacket, shirt or oversleeve.
- Before operating the machine, please firstly disconnect the battery wiring.
- When treating battery or battery wiring, please wear protective gloves and eye protectors.
- Avoid contacting battery liquid acid.
- Please do not spray this machine with high pressure or flush this machine with water pipe.
- Use the replacement parts provided or recognized by the manufacturer.
- All maintenance must be carried out by qualified maintenance personnel.
- Please do not revise the original design of the machine.

**6. When transporting the machine:**

- Please shut down the machine.
- Please do not transport the machine with the battery on.
- Please transport the machine with the aid of the others.
- Please use the suggested handling apron when handling the machine from the truck or trailer.
- Use the rope to fix the machine on the truck or trailer.
- Lower the brush head to the lower position.

**Before submitting service questions please make a detailed description of the symptoms, to be as follows:**

- Serial Number
- Details of damage
- Contents of checked items
- Adjustments made and its effect
- Other useful information

## Accessories

When you need replace parts, only use original accessories by manufacturers. To avoid more serious damage to the machine and make the machine perform better, please replace spare parts on time.

<b>Performans</b>		
Work capacity	m <sup>2</sup> /h	6200
Working width	mm	900
Squeegee width	mm	1100
Maximum forward speed	km/h	6
Maximum gradient	%	15
Sound pressure	dB(A)	61

<b>Water Tank</b>		
Clean water tank capacity	lt	180
Dirty water tank capacity	lt	195

<b>Brush</b>		
Brush quantity		2
Brush place		main
Brush rotating speed	rpm	180
Brush pressure	Kg	40
Brush lifting system		elektrik
Brush diameter	mm	430

<b>Motor</b>		
<b>Driving motor</b>		
Power	W	650
Voltage	V	36
<b>Vacuum motor</b>		
Power	W	550
Voltage	V	36
<b>Brush motor</b>		
Power	W	650 x 2
Voltage	V	36 W

<b>Battery</b>		
Battery quantities and capacity		6 x (6 V / 200 Ah )
Battery section dimension		260 x 180.5 x 273.5 mm
Working hour		4 - 5 hours

Warning: Working hour depends on battery type and using

<b>Brake</b>	
Brake pedal	Mechanic
Hand brake	Mechanic

**Apparatus**

Water tank warning light	x
Low water tank warning light	x
Battery warning light	x
Battery warning light and alarm display	
Emergency stop switch	x
Speed Switch	x
Brush pressure gauge pressure	
Forward / reverse switch	x
Vacuum motor switch	x
Brush Switch	x
Speaker	x



**Standard accessories**

Absorbing strip brush	x
--------------------------	---

**Options**


(A) Round brush	x
(A) Rolling brush	x

Controlling system (1) the brake pedal / parking brake lever hands. (2) throttle step Board. (3) water tank cock hand lever switch. (4) vacuum Motor and absorb head control switch. (5) emergency stop switch (6) speakers (7) speed switch (8) power alarm and display alarm (9) dirty Water tank full warning lights. (10) clean water tank empty warning light (11) brush control switch (12) Start switch (13) forward and back joystick (14) Tank cover (15) reverse alarm

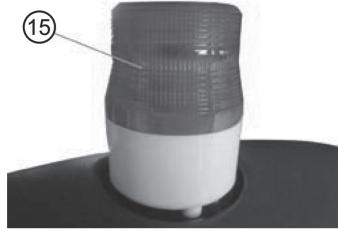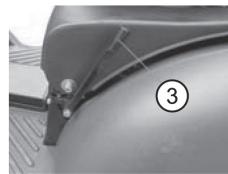

## Control Systems discretion

- (1) the brake pedal / parking brake hands lever. Pedal 1 is the control of the machine's pedal travel or work Brake lever 2 lock pedal 1 and control the machine parking and Brake. (See the "brake" section)
- (2) the accelerator pedal Control the front / back speed.
- (3) tank petcock switch hand lever On or off and adjust the flow to the brush. Off position 0 Open positions 1-4
- (4) vacuum motor and suction switch Control vacuum motor and lower the suction head. Location. "Stop" vacuum motor off, water suction head lift Location. "Fan" vacuum motor on, water suction head down.
- (5) The emergency stop knob At the same time cutting off all the control system. When an emergency occurs, press the switch. Restart operation, turn the knob counter clockwise 1 / 4.
- (6) speakers Control horn operation.
- (7) Speed Switch Used to set the speed when moving or working. Transferred to the "Low" identifies the machine is set to low speed in order to thoroughly clean. Transferred to the "High" setting the machine to identify the high-speed, clean faster.
- (8) Power alarm and display alarm Displays the machine's working time and status of battery, sends alarm signal when battery is low
- (9) dirty water tank full warning light sends alarm signal when dirty water tank is full
- (10) clean water tank empty warning light
- (11) Brush control switch Control the rotation of the brush motor and brush upgrade down. Location P. "stop": the motor off, brush upgrade. Location, rush ": motor on, brush down.
- (12) Key start switch Activate all of the electrical control system components. Location. "0 ", the electric system off Location. "1" electrical system open
- (13) forward and reverse selection lever Provide washing machine forward and backward. Position "Forward": washing machine go forward. Position "Backward": Washing machine go back.
- (14) water tank cap To fill the clean solution tank
- (15) back and forward warning light (red) This light indicates the wrong reverse activated and stop the machine. Continue, as 13 operation described.

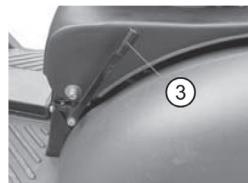

## Common Safety Guide

In this manual, the machine described in line with EC standards and on the machine with a number 98/37/EEC (machinery standards). Person in charge of the machine must comply with EEC directives and local regulation of the working environment to ensure the operation of machinery healthy and safe. Usually start the machine before a preliminary examination.

### Warning

The machine can only be used by authorized operators. Prevent unauthorized use. Any modification, adaptation and application that may lower the safety performance of the machine are prohibited. It will not cause danger if you check the machine when the switch and motors are on off status. Any working behavior that may lower the stability of the machine is prohibited. Please wear gloves and sun-protected glasses while working outdoors. Danger In addition to the rules need to be addressed, the person in charge of the machine must make the following clear to the machine operators: Fixed or mobile hoses must be placed on the correct position. If the rack is removed, or the security system is not connected or short circuit, regardless of any reason, the machine must be repaired immediately before the operation. The machine can only be used under the proper conditions according to proper purpose of use. Comply with the same request in accordance with the purpose of the use and maintenance instructions, and in accordance with professional inspection and maintenance conditions. It is prohibited to use the machine to vacuum flammable or toxic liquids and dust. It is dangerous to touch the moving parts of the machine, this kind of behavior is completely not allowed. If you have to touch these parts, please turn off the machine and remove the key from the dashboard first. The machine is not equipped with a hood, please do not operate in an toxic smoke area and hazardous area. Prohibit persons other than the operators to transport.

### Machine packing

Machine package deliver by flat tools. Machine weight and size are provided in the technical parameters. Forklifts must be placed so that the center of the machine has a half in the truck on the. Packaging must be very careful to avoid collision, need to raise the machine or lift too high. Without too flashy packaging.

### Unloading Packing

Opening the machine must be careful and gentle. Machines must use metal or wooden ramp into the ground.

### Treatment after unloaded packing

After unpacking, check the machine, install the battery if it isn't installed , if there is a short distance transport after use, disconnect battery cable, remove the brush and suction cutter head. Before the longdistance transport, the machine should be restored to the original packaging. The machine can be implemented within a short distance.

### Lifting machine

Use the correct machine to lift machine, but be sure the lifting ability.



## Use of scrubber-dryer

### Necessary prevention

- 1, The machine must be used only by competent and reliable personnel.
- 2, when the machine is not in use, unplug the start key , and put hand brakes on
- 3, when the machine is not in use, lift up the brush in order to avoid distortion of brush
- 4, Do not park on the slope.

### Warning

Before using the machine, first check the battery's liquid volume.

## Start the scrubber-dryer

Steps to launch the machine;

- 1, confirm the sewage tank 2.
- 2, fill up the clean water tank 1.
- 3, check the brush raised to above ground. (button 11 for a "stop" Figure .3) \*
- 4, check the brake is released
- 5, insert the key 5 to the total control panel (Fig.3) and clockwise (this will give total control system power supply).
- 6, press the button 4 to turn on the suction motor (Fig.3).
- 7, press the button 11 to turn on the brush motor (Fig.3).
- 8, open solution tank by the pressing handle to lever 3. (Fig.3).
- 9, move the joystick 14 on the location of A. (Figure .3)
- 10, begin to travel and get a good speed, slow step on the power pedal 2 (Fig.3).

## Common Safety Guide

In this manual, the machine described in line with EC standards and on the machine with a number 98/37/EEC (machinery standards). Person in charge of the machine must comply with EEC directives and local regulation of the working environment to ensure the operation of machinery healthy and safe. Usually start the machine before a preliminary examination.

### Warning

The machine can only be used by authorized operators. Prevent unauthorized use. Any modification, adaptation and application that may lower the safety performance of the machine are prohibited. It will not cause danger if you check the machine when the switch and motors are on off status. Any working behavior that may lower the stability of the machine is prohibited. Please wear gloves and sun-protected glasses while working outdoors.

### Danger

In addition to the rules need to be addressed, the person in charge of the machine must make the following clear to the machine operators: Fixed or mobile hoses must be placed on the correct position. If the rack is removed, or the security system is not connected or short circuit, regardless of any reason, the machine must be repaired immediately before the operation. The machine can only be used under the proper conditions according to proper purpose of use.

Comply with the same request in accordance with the purpose of the use and maintenance instructions, and in accordance with professional inspection and maintenance conditions. It is prohibited to use the machine to vacuum flammable or toxic liquids and dust. It is dangerous to touch the moving parts of the machine, this kind of behavior is completely not allowed. If you have to touch these parts, please turn off the machine and remove the key from the dashboard first.

The machine is not equipped with a hood, please do not operate in an toxic smoke area and hazardous area.

Prohibit persons other than the operators to transport.

## The rules during operation

Don't allow other people close to the machine. Machines can only be used by an experienced operator authorized by the person in charge. The operator must be in proper physical and mental state, not in alcohol, drugs and under the influence of drugs. Ensure the following: There is no unrelated things on the machine. (Eg, tools, rags, equipment, etc..) After turning on the machine, there is not a strange noise. If there is a strange noise, you must immediately stop the machine and check the cause of the noise. All security guards are turned off properly. Do not lower or raise any doubt about the safety of the operation. Must not work in any way reduce the stability of the machine. To keep a safe distance from the floor And sidewalks which is easy to make the machine fall over the edge or surface. Do not drive on slopes, and do not turn too fast, especially the local board does not flat, do not use the machine in a dark environment. Required special attention near the shelf.

### Warning

Do not use water suction system when the water used out. If this happens, it is treated as the improper use of the machine, and the loss of the machine warranty.

### Process of cleaning

The process of using the scrubber machine is very simple. Experience can help you choose the most suitable cleaning brush and cleaning detergent, to make decision when to use cleaning and drying processes to improve the cleaning effect. If the ground is very dirty, we will use two-stage process. The first stage is to use the brush in tens of square meters of floor, and the suction head lifted. This will leave detergent on the floor in order to remove the dirt better. The second stage is to lower the squeegee head to vacuum sewage.

### Warning

This type of operation must implemented in the place where unauthorized officer must not enter the place; should put an appropriate sign near the cleaning spot. In order to complete the cleaning process, perform the following procedure: press the button labeled with brush mark 11 (Figure .3) to start the brush motor. Turn on clean water tank switch mark 3(Fig.3) to release clean water. To set the speed of the water flow, set the clean water control lever 3 in the middle, so that the entire surface behind the brush will be immediately wet, and there will be no excess water spilling out of the squeegee. Press the button to start the vacuum motor, to lower the squeegee. Step on the accelerator pedal 2(Figure 3), the machine will move forward in the required speed and cleaning job begins. You can choose the speed of the machine by turn the "high low speed switch" to left to run the machine on high speed to get more cleaning efficiency and turn it to right to run on low speed to get better cleaning results. There are two speeds to choose from. Rotary switch 1 (Figure 2), Transferred to the "Low" identifies the machine is set to low speed in order to thoroughly clean. Transferred to the "High" setting the machine to identify the high-speed, clean faster.

When moving the machine backward, pull the joystick 14 (Figure 3) backwards, when vacuuming and cleaning operations are completed, perform the following process.

—Press down the clean water tank switch hand lever to last level to turn off flow.

—Lift the switches mark 11 (Figure 3) upwards to stop the brush motor and lift up the brush.

—Lift the switches mark 4 (figure 3) upwards to vacuum motor and lift up the squeegee.

Press the button 8(Figure 3) to the "STOP"position, water suction head lift automaticallyfrom the floor.

## Water fill and drainage (Figure 4)

Before each cleaning operation, open the lid 12 (Figure 3), fill in the right amount of water and detergent to the clean water tank. The clean water tank is made of polyethylene material, with anti-acid, and anti-solvent to most detergents.

After wash, rotate the control lever 3, with the hose 2, the sewage water will be discharged from the sewage tank.

Clean the sewage tank thoroughly at least once a week, open the lid 1, then lift the suction filter 4.

Must wear protective gloves when performing the above mentioned operations

### Choosing the right detergent Select detergent

To obtain good cleaning results, make sure to use the appropriate detergent. If necessary, ask the supplier for professional advice, and remember over using strong detergent may shorten the working life of the machine. Be sure to use low foam detergent or anti-foaming agent, which can avoid damage to the water motor. If you can not get these products, you can use this alternative method, the use of 50cc ordinary wine vinegar before adding recycling bins. Use it clear water tank.

Must clean the sewage tank every eight hours, in accordance with the following program:

- twist the handle 5., opened the lid 6.
- using the sponge, or high-pressure water gun clean the sewage water tank
- After the completion of the above one by one close the lid 6 immediately

### Danger

Do not use corrosive products damage water tanks and your health. Necessary to use gloves and protective glasses.

### Warning

Before replacing brush, pull start key on the panel to ensure that the motor will not accidentally start



## Machine maintenance

### Warning

Before replacing brush, pull start key on the panel to ensure that the motor will not accidentally start

### Brush replacement

According to the following procedure: remove the cotter pin A, open the Brushes protection of B; open the spring 2, as shown in the arrow Then brush 2-3-4-5 set to leave the center of 1. Spin out from the screw 3, remove the brush 5 from the bracket 4. Install a new brush, please follow the following procedure: with screws 3, the mounting bracket 4 new brush 5; replace brush combination 2-3-4-5, it can be simply installed in the appropriate location.




### Ready to use the machine

Adjustment of suction head In order to meet packaging needs, suction head is individually packaged, it should be installed on the drive plate, the step is as follows:

1. Raise the pallet
2. Insert the screws 1 to number 2 and keep a slight tilt as shown in the photo.
3. Lift suction rake head to the left hand side so that the 3 can insert to 4.
4. load the.R split-pin 4 will be released within at pin 3.
5. Install the suction tube in the mouth of suction head. If you want the good floor Drying effect , water suction head must adjust well. Good water rake head operation, it will come into contact with the floor regulate the angle is very important. A rubber brush behind at the strips must be slightly tilted. Shown: this solution will gather in front of the body. To achieve this process the following order:


Loosen the nut 6 and 7 clockwise to tighten, Increase or counterclockwise to reduce the angle of perspective. When established the right angle, re-tighten the nut 6. Suction head above the ground water height must be adjusted to the appropriate height of plywood and rubber band size too. This operation accomplished by adjusting the nut 8

meters as follows: Adjusting nut 8 clockwise to increase height between suction and the ground and reduce the pressure on the ground. Adjusting nut counter-clockwise to lower height between suction and the ground and increase the pressure on the ground. These nuts are also used adjusting the balance of the floor. To make a rubber band long life, the pressure is as little as possible to achieve better drying results. Note that if the drying effect is often not welcome, that is caused by vacuum system. In this case: Thoroughly clean the tubes, the entrance, filters and water suction head itself Check the case of vacuum cleaner motors Check all the water tank's entrance is closed.

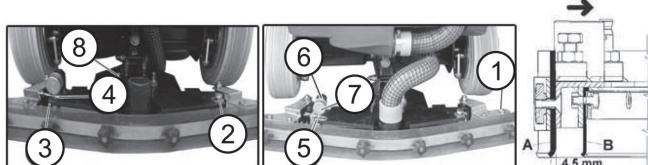

## Suction head's rubber blade

In order to achieve excellent water absorption effect, Rubber blade should maintain its normal operation and replacement work to prevent the destruction of ground loss.

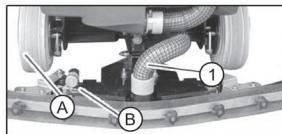


## Replace blade

### Attention

Bıçak yüzeyi, zemin yüzeyi ile aşındığında, kauçuk emme kafası tırmık başlığı değiştirilmelidir.

Düz bıçak mükemmel su emme etkisinin temel unsurlarını korumak için mükemmel bir makinedir.

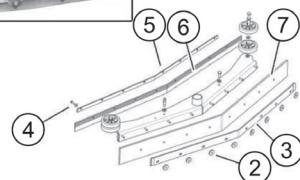

When the knife-edge contact with the floor surface by wear, the rubber suction head rake blade must be replaced. Straight blade is the perfect machine to protect the basic elements of excellent water suction effect. Blade replacement process is as follows: to raise the tray out of the machine head and suction tube 1. Lower suction head, release screw, pull out the R split-pin A and put it in pin B. Loosen the 8 knobs back of belt 3 of and 4 screws back of belt 5. Rotate rubber blade in order to use the new blade. Rubber blade has two sides, and four knife-edge can be used. If all of the flank have been damaged, it should be replaced with the new one. In contrast with the above procedures that a new blade can be installed. The installation process should fit suction head.

## Transmission


Scrubber-dryer is driven by the electrical system, electric power system consists of a front wheel and two electronic controled driven wheel. Joystick 14 (fig.3) make the machine moving forward or backward. Pedal 2 (fig.3) can change the moving speed of the machine Instrument panel has switch 14 of three gears, select switch 14 (fig.3), you can set the pace. Travel or work (please refer to control introduction of -10-point)

## Warning!

In the driver version S/2-RS/2 and "ZAPI" the third gear speed electric system can be used only for turning not for work. In the driver version T and "ELEK D ROSISTEM " the third gear speed can be used for turning around and work .

## Driving operation system

The main driving force generated by wheel 2 spread to wheel 3, and through the driving wheel 3 Implementing the front-wheel drive. While driving, the driver control the resistance felt by the steering wheel size, the resistance can be adjusted through the regulation of the nut 4 .

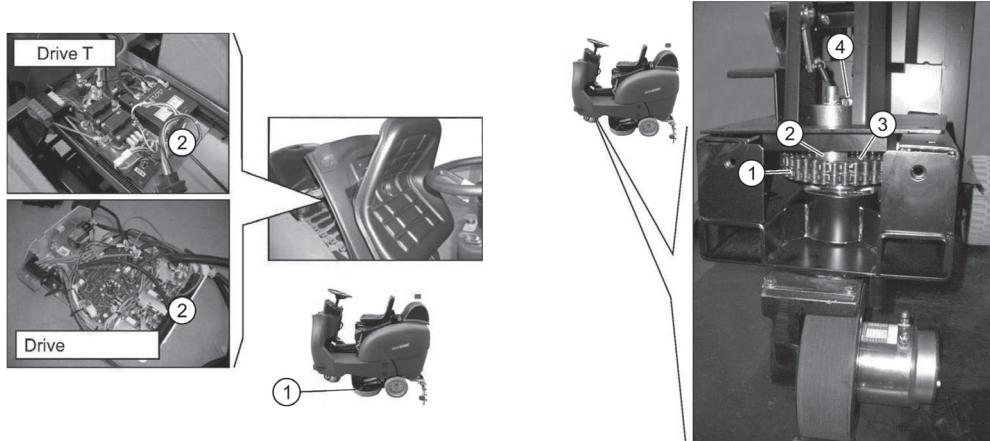

## Braking system

Brake system allows washing cars stop in the movement and remain stationary, but also make the vehicle stable in the inclined plane.

1, The brake system works through the step on the foot brake 1 (see Figure 1) brake back wheels making brakes achieved.

2, Braking is achieved through the manipulation of mechanical devices (see Figure 11).

3, The parking brake system can be locked, follow these steps:

(A) step the foot brake pedal 1 (see Figure 3) in the end.


(B) push the joystick 2 (see Figure 3) to the parking stalls.

The step to unlock brake system was: push lever 2 after slam their feet on the foot brake (see Figure 3) to the appropriate gear. After that they can take the foot brake on the driving control.

4, In case of controlling the vehicle, foot brake does not work, you can adjust it through the regulator 3 to achieve correction.

**Warning**

At least every three months to check and adjust the brakes once.

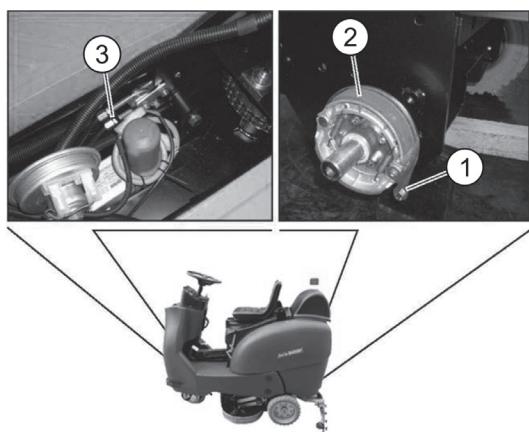

## Suction motor


Absorbent motor sewage drain fluid achieved by roller touching the ground.

Button 4 <Figure 3> is water motor's control switch.

The motor and filter must be checked each day and clean the filter in time.

Check the motor and water filter, follow these steps: Remove the front panel touch switches and open motor cover 3, disconnect the power, exit 4 butterfly nut, remove the motor and check (see the arrow shown in Figure 13).

Installation follow reverse above steps.

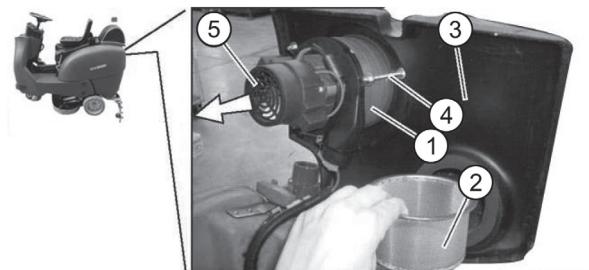

## Warning

The water motor's liner must be checked every six months once, in case of damage please change a new one.

Liner replacement following these steps: Remove the plastic cup 5, release the nut, remove the liner base, carefully check the liner. Installation follow reverse above steps.

## Battery

### Check the battery performance

The density of the electrolyte is closely related to the battery performance, therefore, measuring the electrolyte density is crucial. Battery electrolyte in the normal state of charge density should be at about 1.260 (300B e). If the density is between 1.26 (300B e) and 1.2 to 240B e), and electrical storage pool only partially charged. If the density is less than 1.14 (180B e), it means that the electrical storage pond has expired.

## Measuring electrolyte density

The density of the electrolyte is closely related to the battery performance, therefore, the measurement must be very careful. Electrolyte density measured by density meter. Please note that the correct place density meter in the measure process . In the determination, such as needing to add distilled water, electrolyte, it must read the data after both mixing fully .

### Distilled water filling

After charge, fill distilled water to the battery until it is higher than the top of the electrode plate 6mm, battery initial use, water must be added after each charge. Use for some time, Number may be reduced with water views, according to the actual situation , but must ensure that not less than 1 times per week.

### Charge limit

The battery after being used for some time, if the density is not lower than the value measured 1.24( 280B e), you do not need charging. If the battery is long-term over-charging,it will significantly reduce the battery life. Solutions liquid's suitable temperature when Charging should be less than 450C or less. When charging if the electrolyte is higher than environment temperature 10- 120C, No matter how much the temperature of the elect rolyte, over -charging of circumstances may occur. When the meter shows that only 5-10% of the electricity, the machine can only absorb dust and can't sweep the floor.

## Battery charging areas

Battery in the charging process will produce a certain fuel gas, where the charging process of charging areas must be maintained adequate ventilation and can't have any electricity, fire. Charging place not only to maintain adequate Ventilation but also to ensure that the room temperature maintained at 40-45C below. Place in the charge of existing inadequate ventilation ci rcumstances, the user can set up ventilation ducts (Can't share a emission Mouth with the original chimney), or install a fan to resolve the problem.

## Not continuous use or long-term idle

If the battery is not used continuously, even if the electrolysis liquid number is in the normal range, every month, users must give the battery discharge to keep cells alive again If the battery needs a long period idle, it must be saved in a dry cool place. Users must recharge the battery completely at least a time monthly. At the thorough process of charging, the battery's every single cell should be seen bubbling, voltage and electrolyte density reading number must have a stable record of 3-4 hours. Under any circumstances, battery of a long idle time must be charged before use and electrolysis quality testing.

## Install the battery

The steps to install the battery components are as follows:

Remove the steering wheel, unscrew the nut 1 (see Figure 13)

Move away Block, unscrew the nut 2 (see Figure 13)

Remove the battery strap, unscrew the nut 3 (see Figure book 13)

Before installing the battery, be sure to check all the components necessary to be intact. Battery has clean appearance. In connection access port of Vaseline or grease can be coated. if the battery electricity has been loss before installation, then wait until after full installation.


## Battery charger connection

Steps to replace batteries is as follows:

Remove the steering wheel 1

Remove Seat 2

Remove the strap 3

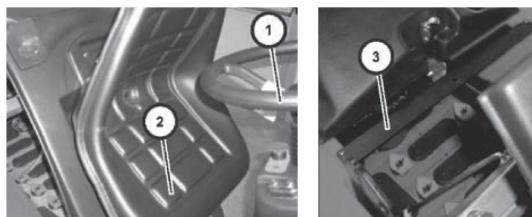

## Security check routine control of maintenance operations

(1) sweeper must be checked its security, damage or failure by professional and technical personnel in accordance with the following steps: Check before you turn the engine off After that change parts or maintenance In a certain time interval, implement in accordance with the "routine maintenance and operational control" instruction sheet.

2) every 6 months in normal working status check safety devices, inspector must be the authority of the expert organization.To ensure the Safety devices in normal operation,the machine must be checked 5 years each school year by skilled personnel histology.

3) The person responsible for the machine must be checked annually in accordance with the conditions required by the machine, check the machine during the period, the responsible person must judge whether sweeping machines are still in accordance with technical safety regulations. Then mark the drawing board to come up with what has been said checked.

Perform regular maintenance procedures	Each interval					
	8	40	125	200	500	1500
1 Clean repair water tank	x					
2 clean Vacuum cleaner motor filter	x					
3 Check the filter tank	x					
4 clean the water tank filters		x				
5 Check the vacuum pipe and suction head	x					
6 Check the brush status		x				
7 Check the edge of the suction head		x				
8 Gear chain oiling					x	
9 Check the motor brushes every six months					x	
10 Check safety devices (micro-switch, horn, emergency stop button, etc.)		x				

Problem	Reason	Remedies
<b>Suction head inadequate drying</b>	Old rubber adhesive Tube is free from obstruction Adjustment of brush is not suitable Suction head blocked Burning vacuum cleaner motor Motor carbon brush old Brush position is not low enough	Replace Rubber Clean Pipes Adjust brush Cleanblockatsuctionhead Checkandreplace the mo t o r Replacing carbon brushes Check the lower brush
<b>Cleaning agent can't flow on the brush average</b>	Brush water supply blocking Cleaning agent valve closed or not open enough Water pipes by extrusion No water in water tank	Washing pipe lines Open the cleaning agent valve Restoration or replace of piping Add water to the tank
<b>Machine wash result is not satisfactory</b>	Old brush Dashboard errors led to the brush on ground pressure is not enough	Replace brush Increase the brush pressure
<b>Machine can not start</b>	The main switch between 5 and 3 can not switch Battery unit burn Micro switch set incorrectly Pressed with a sudden emergency stop button	Clockwise rotation switch When the red light on,check, if necessary, replaceWarning! Fuse is in the control unit,never use a high-level fuse, and will cause harm, if the fuse repeatedly has error, please contact service center. Replace Micro Switch Release emergency stop and restart the machine(See washing machine start program)
<b>The machine does not start or stop suddenly</b>	Battery terminal relaxation The operator touch micro switch cut off the power system micro switch under the seat of power has error or not connected The operator has started and the seat of micro fuse has been broken	Connect the battery Release button and start the process repeatedly Replace or connect Micro-switch Sit down, turn off the machine and then restart

Problem	Reason	Remedial method
After the machine is not moving the work forward	Drive pedal failure Control component failures	Check the connection Check the control section
Vacuum cleaner motor shut down or start	Tank float switch cut off vacuum motor power supply (Drive S and Jumbo series, this will be displayed through the instrument panel 72 the alarm code)	Turn off vacuum cleaner motors, empty the water tank
Difficulty moving the machine	Brake is pressed	release brake switch
Stop the machine has water leakage	Liquid valve open Damage to piping or seals	Close the valve Replacement of pipes or seals
The system can not reduce the increase in brush	Fuse fault Starter can't accept the current Starter motor damage Circuit board problem	Replacement Check Replacement Replace circuit board

## LABOMAT 195B

A.E.E.E. yönetmeliğine uygundur.

AKÜ / BATTERY	36 V / 200 Ah	VAKUM MOTOR / VACUUM MOTOR	550 W
FİRÇA DEVİRİ / BRUSH ROTATING	180 rpm	FİRÇA MOTORU / BRUSH MOTOR	650 W x 2



### İTHALATÇI FIRMA / IMPORTER :

EDİT ENDÜSTRİYEL MAK. SAN. TİC. A.Ş.

Çamlıca Mah. Anadolu Blv. Ç Blok 20 U 4 Yenimahalle

Ankara Türkiye Tel: +90 312 394 75 00



[www.laboory.com](http://www.laboory.com)

**EDİT ENDÜSTRİYEL MAK. SAN. TiC. A.Ş.**

Çamlıca Mah. Anadolu Blv. Ç Blok 20 U 4 Yenimahalle Ankara Türkiye Tel: +90 312 394 75 00

---

 **DANIŞMA HATTI**  
(+90) **444 6 900**  
**HOTLINE**